



Suntracer KNX-GPS light Weather Station

Item numbers 3090 (230V AC), 3094 (20...30 V DC)



1. Installation and commissioning	3
2. Description	3
2.1. Scope of delivery	4
2.1.1. Optionally orderable accessories	4
3. Commissioning	4
3.1. Addressing of the device at the bus	5
4. Transmission protocol	6
4.1. List of all communication objects	6
5. Setting of parameters	14
5.1. General settings	14
5.2. Location	15
5.3. Position of the sun	16
5.3.1. Position of the sun in sector 1 / 2 / 3 / 4 / 5	16
5.4. Temperature	17
5.4.1. Temperature threshold value 1 / 2 / 3 / 4	17
5.5. Wind force	18
5.5.1. Wind force threshold value 1 / 2 / 3	19
5.6. Lightness	19
5.6.1. Lightness threshold value 1 / 2 / 3	19
5.7. Dawn	20
5.7.1. Dawn threshold value 1 / 2 / 3	20
5.8. Calendar time switch	20
5.8.1. Calendar time switch period 1 / 2 / 3	20
5.8.2. Calendar time switch period 1 / 2 / 3, sequence 1 / 2	20
5.9. Week time switch	21
5.9.1. Week time switch Mon, Tue, Wed, ..., 1...4	21
5.10. AND Logic	22
5.10.1. AND Logic 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8	22
5.10.2. Linkage inputs of AND logic	23
5.11. OR Logic	26
5.11.1. OR Logic 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8	27
5.11.2. Linkage inputs of OR logic	27

This manual is amended periodically and will be brought into line with new software releases. The change status (software version and date) can be found in the contents footer. If you have a device with a later software version, please check **www.elsner-elektronik.de** in the menu area "Service" to find out whether a more up-to-date version of the manual is available.

Clarification of signs used in this manual



Safety advice.



Safety advice for working on electrical connections, components, etc.

DANGER!

... indicates an immediately hazardous situation which will lead to death or severe injuries if it is not avoided.

WARNING!

... indicates a potentially hazardous situation which may lead to death or severe injuries if it is not avoided.

CAUTION!

... indicates a potentially hazardous situation which may lead to trivial or minor injuries if it is not avoided.



ATTENTION! ... indicates a situation which may lead to damage to property if it is not avoided.

ETS

In the ETS tables, the parameter default settings are marked by underlining.

1. Installation and commissioning



Installation, testing, operational start-up and troubleshooting should only be performed by an authorised electrician.



DANGER!

Risk to life from live voltage (mains voltage)!

There are unprotected live components inside the device.

- Inspect the device for damage before installation. Only put undamaged devices into operation.
 - Comply with the locally applicable directives, regulations and provisions for electrical installation.
 - Immediately take the device or system out of service and secure it against unintentional switch-on if risk-free operation is no longer guaranteed.
-

Use the device exclusively for building automation and observe the operating instructions. Improper use, modifications to the device or failure to observe the operating instructions will invalidate any warranty or guarantee claims.

Operate the device only as a fixed-site installation, i.e. only in assembled condition and after conclusion of all installation and operational start-up tasks, and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

For information on installation, maintenance, disposal, scope of delivery and technical data, please refer to the installation instructions.

2. Description

The **Weather Station Suntracer KNX-GPS light** measures temperature, wind speed and brightness. It perceives precipitation and receives the GPS signal for time and position. Furthermore, the exact position of the sun (azimuth and elevation) is calculated on the basis of location coordinates and time.



ATTENTION

The calculation of the position of the sun is optimised for UTC -1...+3.

The device therefore may only be applied within Europe. For other time zones, please use Suntracer KNX-GPS Weather Station.

All data may be used for the control of switching outputs which depend on threshold values. The states may be linked by means of AND and OR logic gates. The compact housing of **Suntracer KNX-GPS light** stores the sensor system, the evaluation electronics and the electronics of the bus connection.

Functions:

- **Brightness and position of the sun:** The current light intensity is measured by means of a sensor. At the same time, Suntracer KNX-GPS light calculates the position of the sun (azimuth and elevation) on the basis of time and location
- **Shade control** (Position of the sun in sector) for up to 5 facades
- **Wind measurement:** The measurement of wind speed is accomplished electronically and thus noiseless and reliable even in case of hail, snow and minus temperature. Air swirls and up-draught in the radius of the weather station are collected, too
- **Wind sensor monitoring:** If the wind measurement value changes by less than ± 0.5 m/s within 48 hours, a fault can be output. The wind measured value is output with the maximum measured value of 35 m/s and all wind threshold values below this value become active
- **Precipitation perception:** The surface of the sensor is heated so that only drops and flakes are recognised as precipitation but not fog or dew. If it stops raining or snowing, the sensor dries quickly and the precipitation message ends
- **Temperature measurement**
- **Week and calendar time switch:** The weather station receives time and date from the integrated GPS receiver. The week time switch operates up to 4 different periods each day. With the calendar time switch, you may determine 3 additional periods where the time switch accomplishes up to 2 activations and deactivations each day. The Switching outputs can be used as communication objects. The switching times are set by parameter or via communication objects
- **Threshold values** for all measured and calculated values can be set by parameter or via communication objects
- **8 AND and 8 OR logic gates** with each 4 inputs. Every switching incident as well as 8 logic inputs (in the form of communication objects) may be used as inputs for the logic gates. The output of each gate may optionally be configured as 1 bit or 2 x 8 bits

2.1. Scope of delivery

- Weather station with combined wall/pole mounting
- 2x stainless steel installation band for pole installation

2.1.1. Optionally orderable accessories

Arm L, Flex L, Flex S, Fix, Fix P (no. 30112 - 30129)

3. Commissioning

The measured wind value and thus all other wind switching outputs may only be supplied 60 seconds after the supply voltage has been connected.

Configuration is made using the KNX software ETS. The **product file** can be downloaded from the Elsner Elektronik website on **www.elsner-elektronik.de** in the “Service” menu.

After the bus voltage has been applied, the device will enter an initialisation phase lasting approx. 5 seconds. During this phase no information can be received or sent via the bus.

3.1. Addressing of the device at the bus

The equipment is delivered with the individual address 15.15.255. This can be changed via the ETS. There is a button and a control LED on the circuit board inside the housing for this purpose.

4. Transmission protocol

Units of measurement:

Temperatures in degree Celsius

Brightness in lux

Wind in meters per second

4.1. List of all communication objects

Abbreviations EIS types:

1 Switching 1/0

3 Time

4 Date

5 Floating decimal value

6 8 bit value

Abbreviations flags:

C Communication

R Read

W Write

T Transmit

No.	Name	Function	EIS type	Flags
0	date		4	C R W T
1	time		3	C R W T
2	Date and time requirement		1	C R W
3	Switching output dawn		1	C R T
4	Switching output rain		1	C R T
5	Logic input 1		1	C R W
6	Logic input 2		1	C R W
7	Logic input 3		1	C R W
8	Logic input 4		1	C R W
9	Logic input 5		1	C R W
10	Logic input 6		1	C R W
11	Logic input 7		1	C R W
12	Logic input 8		1	C R W
13	Sun position azimuth		5	C R T
14	Sun position elevation		5	C R T
15	Switching output sun in sector 1		1	C R T
16	Switching output sun in sector 2		1	C R T
17	Switching output sun in sector 3		1	C R T
18	Switching output sun in sector 4		1	C R T
19	Switching output sun in sector 5		1	C R T

No.	Name	Function	EIS type	Flags
20	Measured temperature value		5	C R T
21	Requirement min/max temperature	Requirement	1	C R W
22	Lowest measured temperature value	Sends min. temperature	5	C R T
23	Highest measured temperature value	Sends max. temperature	5	C R T
24	Min/max temperature reset	Reset of temperature	1	C R W
25	Temperature threshold value 1	Target value	5	C R W
26	Temperature threshold value 1	Actual value	5	C R T
27	Temperature threshold value 2	Target value	5	C R W
28	Temperature threshold value 2	Actual value	5	C R T
29	Temperature threshold value 3	Target value	5	C R W
30	Temperature threshold value 3	Actual value	5	C R T
31	Temperature threshold value 4	Target value	5	C R W
32	Temperature threshold value 4	Actual value	5	C R T
33	Switching output temperature threshold value 1		1	C R T
34	Switching output temperature threshold value 2		1	C R T
35	Switching output temperature threshold value 3		1	C R T
36	Switching output temperature threshold value 4		1	C R T
37	Measured value of wind force		5	C R T
38	Requirement max. wind force	Requirement	1	C R W
39	Highest measured value of wind force	Sends max. wind force	5	C R T
40	Max. wind force reset	Reset of wind force	1	C R W
41	Wind force threshold value 1	Target value	5	C R W
42	Wind force threshold value 1	Actual value	5	C R T
43	Wind force threshold value 2	Target value	5	C R W
44	Wind force threshold value 2	Actual value	5	C R T
45	Wind force threshold value 3	Target value	5	C R W
46	Wind force threshold value 3	Actual value	5	C R T
47	Switching output wind force threshold value 1		1	C R T
48	Switching output wind force threshold value 2		1	C R T

No.	Name	Function	EIS type	Flags
49	Switching output wind force threshold value 3		1	C R T
50	Measured light value		5	C R T
51	Lightness threshold value 1	Target value	5	C R W
52	Lightness threshold value 1	Actual value	5	C R T
53	Lightness threshold value 2	Target value	5	C R W
54	Lightness threshold value 2	Actual value	5	C R T
55	Lightness threshold value 3	Target value	5	C R W
56	Lightness threshold value 3	Actual value	5	C R T
57	Switching output light threshold value 1		1	C R T
58	Switching output light threshold value 2		1	C R T
59	Switching output light threshold value 3		1	C R T
60	Activation time period 1, sequence 1	Calendar time switch	3	C R W
61	Switch off time period 1, sequence 1	Calendar time switch	3	C R W
62	Switching output calendar time switch	Period 1, sequence 1	1	C R T
63	Activation time period 1, sequence 2	Calendar time switch	3	C R W
64	Switch off time period 1, sequence 2	Calendar time switch	3	C R W
65	Switching output calendar time switch	Period 1, sequence 2	1	C R T
66	Activation time period 2, sequence 1	Calendar time switch	3	C R W
67	Switch off time period 2, sequence 1	Calendar time switch	3	C R W
68	Switching output calendar time switch	Period 2, sequence 1	1	C R T
69	Activation time period 2, sequence 2	Calendar time switch	3	C R W
70	Switch off time period 2, sequence 2	Calendar time switch	3	C R W
71	Switching output calendar time switch	Period 2, sequence 2	1	C R T
72	Activation time period 3, sequence 1	Calendar time switch	3	C R W

No.	Name	Function	EIS type	Flags
73	Switch off time period 3, sequence 1	Calendar time switch	3	C R W
74	Switching output calendar time switch	Period 3, sequence 1	1	C R T
75	Activation time period 3, sequence 2	Calendar time switch	3	C R W
76	Switch off time period 3, sequence 2	Calendar time switch	3	C R W
77	Switching output calendar time switch	Period 3, sequence 2	1	C R T
78	Activation time Monday 1	Week time switch	3	C R W
79	Switch off time Monday 1	Week time switch	3	C R W
80	Activation time Monday 2	Week time switch	3	C R W
81	Switch off time Monday 2	Week time switch	3	C R W
82	Activation time Monday 3	Week time switch	3	C R W
83	Switch off time Monday 3	Week time switch	3	C R W
84	Activation time Monday 4	Week time switch	3	C R W
85	Switch off time Monday 4	Week time switch	3	C R W
86	Switching output week time switch	Monday 1	1	C R T
87	Switching output week time switch	Monday 2	1	C R T
88	Switching output week time switch	Monday 3	1	C R T
89	Switching output week time switch	Monday 4	1	C R T
90	Activation time Tuesday 1	Week time switch	3	C R W
91	Switch off time Tuesday 1	Week time switch	3	C R W
92	Activation time Tuesday 2	Week time switch	3	C R W
93	Switch off time Tuesday 2	Week time switch	3	C R W
94	Activation time Tuesday 3	Week time switch	3	C R W
95	Switch off time Tuesday 3	Week time switch	3	C R W
96	Activation time Tuesday 4	Week time switch	3	C R W
97	Switch off time Tuesday 4	Week time switch	3	C R W
98	Switching output week time switch	Tuesday 1	1	C R T
99	Switching output week time switch	Tuesday 2	1	C R T
100	Switching output week time switch	Tuesday 3	1	C R T
101	Switching output week time switch	Tuesday 4	1	C R T
102	Activation time Wednesday 1	Week time switch	3	C R W
103	Switch off time Wednesday 1	Week time switch	3	C R W
104	Activation time Wednesday 2	Week time switch	3	C R W
105	Switch off time Wednesday 2	Week time switch	3	C R W
106	Activation time Wednesday 3	Week time switch	3	C R W

No.	Name	Function	EIS type	Flags
107	Switch off time Wednesday 3	Week time switch	3	C R W
108	Activation time Wednesday 4	Week time switch	3	C R W
109	Switch off time Wednesday 4	Week time switch	3	C R W
110	Switching output week time switch	Wednesday 1	1	C R T
111	Switching output week time switch	Wednesday 2	1	C R T
112	Switching output week time switch	Wednesday 3	1	C R T
113	Switching output week time switch	Wednesday 4	1	C R T
114	Activation time Thursday 1	Week time switch	3	C R W
115	Switch off time Thursday 1	Week time switch	3	C R W
116	Activation time Thursday 2	Week time switch	3	C R W
117	Switch off time Thursday 2	Week time switch	3	C R W
118	Activation time Thursday 3	Week time switch	3	C R W
119	Switch off time Thursday 3	Week time switch	3	C R W
120	Activation time Thursday 4	Week time switch	3	C R W
121	Switch off time Thursday 4	Week time switch	3	C R W
122	Switching output week time switch	Thursday 1	1	C R T
123	Switching output week time switch	Thursday 2	1	C R T
124	Switching output week time switch	Thursday 3	1	C R T
125	Switching output week time switch	Thursday 4	1	C R T
126	Activation time Friday 1	Week time switch	3	C R W
127	Switch off time Friday 1	Week time switch	3	C R W
128	Activation time Friday 2	Week time switch	3	C R W
129	Switch off time Friday 2	Week time switch	3	C R W
130	Activation time Friday 3	Week time switch	3	C R W
131	Switch off time Friday 3	Week time switch	3	C R W
132	Activation time Friday 4	Week time switch	3	C R W
133	Switch off time Friday 4	Week time switch	3	C R W
134	Switching output week time switch	Friday 1	1	C R T
135	Switching output week time switch	Friday 2	1	C R T
136	Switching output week time switch	Friday 3	1	C R T
137	Switching output week time switch	Friday 4	1	C R T
138	Activation time Saturday 1	Week time switch	3	C R W
139	Switch off time Saturday 1	Week time switch	3	C R W
140	Activation time Saturday 2	Week time switch	3	C R W
141	Switch off time Saturday 2	Week time switch	3	C R W
142	Activation time Saturday 3	Week time switch	3	C R W
143	Switch off time Saturday 3	Week time switch	3	C R W
144	Activation time Saturday 4	Week time switch	3	C R W
145	Switch off time Saturday 4	Week time switch	3	C R W

No.	Name	Function	EIS type	Flags
146	Switching output week time switch	Saturday 1	1	C R T
147	Switching output week time switch	Saturday 2	1	C R T
148	Switching output week time switch	Saturday 3	1	C R T
149	Switching output week time switch	Saturday 4	1	C R T
150	Activation time Sunday 1	Week time switch	3	C R W
151	Switch off time Sunday 1	Week time switch	3	C R W
152	Activation time Sunday 2	Week time switch	3	C R W
153	Switch off time Sunday 2	Week time switch	3	C R W
154	Activation time Sunday 3	Week time switch	3	C R W
155	Switch off time Sunday 3	Week time switch	3	C R W
156	Activation time Sunday 4	Week time switch	3	C R W
157	Switch off time Sunday 4	Week time switch	3	C R W
158	Switching output week time switch	Sunday 1	1	C R T
159	Switching output week time switch	Sunday 2	1	C R T
160	Switching output week time switch	Sunday 3	1	C R T
161	Switching output week time switch	Sunday 4	1	C R T
162	AND logic 1	Switching output	1	C R T
163	AND logic 1	8 Bit output A	6	C R T
164	AND logic 1	8 Bit output B	6	C R T
165	AND logic 2	Switching output	1	C R T
166	AND logic 2	8 Bit output A	6	C R T
167	AND logic 2	8 Bit output B	6	C R T
168	AND logic 3	Switching output	1	C R T
169	AND logic 3	8 Bit output A	6	C R T
170	AND logic 3	8 Bit output B	6	C R T
171	AND logic 4	Switching output	1	C R T
172	AND logic 4	8 Bit output A	6	C R T
173	AND logic 4	8 Bit output B	6	C R T
174	AND logic 5	Switching output	1	C R T
175	AND logic 5	8 Bit output A	6	C R T
176	AND logic 5	8 Bit output B	6	C R T
177	AND logic 6	Switching output	1	C R T
178	AND logic 6	8 Bit output A	6	C R T
179	AND logic 6	8 Bit output B	6	C R T
180	AND logic 7	Switching output	1	C R T
181	AND logic 7	8 Bit output A	6	C R T
182	AND logic 7	8 Bit output B	6	C R T
183	AND logic 8	Switching output	1	C R T
184	AND logic 8	8 Bit output A	6	C R T

No.	Name	Function	EIS type	Flags
185	AND logic 8	8 Bit output B	6	C R T
186	OR logic 1	Switching output	1	C R T
187	OR logic 1	8 Bit output A	6	C R T
188	OR logic 1	8 Bit output B	6	C R T
189	OR logic 2	Switching output	1	C R T
190	OR logic 2	8 Bit output A	6	C R T
191	OR logic 2	8 Bit output B	6	C R T
192	OR logic 3	Switching output	1	C R T
193	OR logic 3	8 Bit output A	6	C R T
194	OR logic 3	8 Bit output B	6	C R T
195	OR logic 4	Switching output	1	C R T
196	OR logic 4	8 Bit output A	6	C R T
197	OR logic 4	8 Bit output B	6	C R T
198	OR logic 5	Switching output	1	C R T
199	OR logic 5	8 Bit output A	6	C R T
200	OR logic 5	8 Bit output B	6	C R T
201	OR logic 6	Switching output	1	C R T
202	OR logic 6	8 Bit output A	6	C R T
203	OR logic 6	8 Bit output B	6	C R T
204	OR logic 7	Switching output	1	C R T
205	OR logic 7	8 Bit output A	6	C R T
206	OR logic 7	8 Bit output B	6	C R T
207	OR logic 8	Switching output	1	C R T
208	OR logic 8	8 Bit output A	6	C R T
209	OR logic 8	8 Bit output B	6	C R T
210	Dawn threshold value 1	Target value	5	C R W
211	Dawn threshold value 1	Actual value	5	C R T
212	Dawn threshold value 2	Target value	5	C R W
213	Dawn threshold value 2	Actual value	5	C R T
214	Dawn threshold value 3	Target value	5	C R W
215	Dawn threshold value 3	Actual value	5	C R T
216	Switching output dawn threshold value 1		1	C R T
217	Switching output dawn threshold value 2		1	C R T
218	Switching output dawn threshold value 3		1	C R T

No.	Name	Function	EIS type	Flags
219	Temperature sensor failure	Output	1	C R T
220	Wind sensor failure	Output	1	C R T
221	Date and time synchronised	Output	1	C R T

5. Setting of parameters

5.1. General settings

General settings	
Measured values send all cyclically	5 sec
Date and time are set by	GPS-signal and not sent
Function of GPS-LED	Display GPS-cycle
Time zone (UTC +1 for Germany / CET)	UTC + 1
Switching outputs cyclically send all	5 sec
Communication object switching output night	do not send
Communication object switching output rain	do not send
Communication objects logic inputs	do not release
Logic output cyclical send all	5 sec
Transmission delay of switching outputs after power up and programming	10 sec
Maximum telegram rate	5 telegrams per second

Measured values send all cyclically	5 sec ... 2 h
Date and time are set by	<ul style="list-style-type: none"> • <u>Radio signal and not sent</u> • Radio signal and sent cyclically • Radio signal and sent on request • Radio signal and on request + sent cyclically • Communication objects und not sent

If date and time are set by a GPS signal:

The current date and time may firstly be predetermined by ETS. The weather station operates with these data until it receives a valid GPS signal for the first time.

If date and time are set by a communication object:

There must not be a change in date between the sending of date and the sending of time; both must be sent to the weather station on the same day.

For the initial operation, date and time must be sent directly one after the other in order that the clock of the device can start.

Function of radio LED	<ul style="list-style-type: none"> • <u>Display cycles tuned to seconds</u> • always OFF
Time zone	UTC-1 • UTC • <u>UTC+1</u> • UTC+2 • UTC+3
Switching outputs cyclically send all	<u>5 sec</u> • 10 sec • 30 sec • ... • 2 h
Communication object switching output night "(The output reacts with a delay of approx. 1 minute; "night" is recognised when light is below 10 lux)	<ul style="list-style-type: none"> • <u>do not send</u> • send in case of change • send inverted in case of change • send in case of change and cyclically • send inverted in case of change and cyclically (as in case of all switching outputs)
Communication object Switching output rain (After approx. 8 minutes without rain, the output is reset)	(as in case of switching output night)
Communication objects logic inputs	<u>do not release</u> • release
Send all logic outputs cyclically	<u>5 sec</u> • 10 sec • 30 sec • ... • 2 h
Delayed sending of the switching outputs after power up and programming	5 sec • 10 sec • 30 sec • ... • 2 h; <u>10 sec</u>
Maximum telegram rate	1 • 2 • 3 • <u>5</u> • 10 • 20 <u>telegrams per second</u>

5.2. Location

The position is received via GPS! The following settings are used during first commissioning as long as there is still no GPS reception.

The indication of the location is necessary for the calculation of the position of the sun with the help of date and time.

If the location is determined by the coordinates of a given city:

Location is determined by	given city
Country	<u>Germany</u> • Austria • Switzerland • other countries
City/postal code/coordinates	30 towns in Germany 5 towns in Austria 4 towns in the Switzerland 7 towns in other countries

If the location is determined by entry of coordinates:

Location is determined by	entry of coordinates
Eastern longitude in degrees	-180 ... +180
Eastern longitude in minutes	-59 ... + 59

Northern latitude in degrees	-90 ... +90
Northern latitude in minutes	-59 ... + 59

5.3. Position of the sun

The function "position of the sun" is only possible in case of receipt of date and time.

The calculation of the position of the sun is optimised for UTC -1...+3. The device therefore may only be applied within Europe. For other time zones, please use Suntracer KNX-GPS Weather Station.

Azimuth and elevation	<ul style="list-style-type: none"> • do not send • send cyclically • send in case of change • send in case of change and cyclically
From a change of	1 ... 15 degrees; <u>3 degrees</u>
Sector 1 / 2 / 3 / 4 / 5	<u>not active</u> • active

5.3.1. Position of the sun in sector 1 / 2 / 3 / 4 / 5

Definition of the position of the sun by	Azimuth and elevation • <u>directions</u>
--	---

If the position of the sun is defined by directions:

Definition of the position of the sun by	directions
Direction	<u>East</u> • Southeast • Southwest • West
Communication object switching output sun in sector 1 / 2 / 3 / 4 /	<ul style="list-style-type: none"> • <u>do not send</u> • send in case of change • send inverted in case of change • send in case of change and cyclically • send inverted in case of change and cyclically

Directions:

East: azimuth 0°-180°, elevation 0°-90°

Southeast: azimuth 45°-225°, elevation 0°-90°

South: azimuth 90°-270°, elevation 0°-90°

Southwest: azimuth 135°-315°, elevation 0°-90°

West: azimuth 180°-360°, elevation 0°-90°


If the position of the sun is defined by azimuth and elevation:

All data in ° (degree)

Definition of the position of the sun by	Azimuth and elevation
Azimuth from	<u>0</u> ... 360 degrees
Azimuth up to	<u>0</u> ... 360 degrees
Elevation from	<u>0</u> ... 90 degrees


Elevation up to	<u>0</u> ... 90 degrees
Communication object switching output sun in sector 1 / 2 / 3 / 4 /	<ul style="list-style-type: none"> • <u>do not send</u> • send in case of change • send inverted in case of change • send in case of change and cyclically • send inverted in case of change and cyclically

Direction of sun (azimuth):
North (0°)

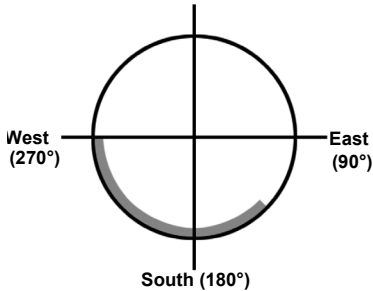

Marked area:
Azimuth from 135° up to 270°

Height of sun (elevation):

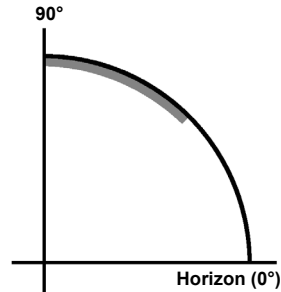

Marked area:
Elevation from 45° up to 90°

5.4. Temperature

Measured value	<ul style="list-style-type: none"> • <u>not send</u> • send cyclically • send in case of change • send in case of change and cyclically
From a temperature change of	<u>0.5°C</u> • 1°C • 2°C • 3°C • 4°C • 5°C
Temperature offset in 0.1°C	-50 ... 50; <u>0</u>
Send and reset of the min. and max. temperature value on request	<u>do not release</u> • release
Threshold value 1 / 2 / 3 / 4	<u>not active</u> • active

5.4.1. Temperature threshold value 1 / 2 / 3 / 4

Threshold value is set by	<ul style="list-style-type: none"> • <u>Parameter</u> • Communication object • Com. object with saving of the last value
---------------------------	---

If the threshold is set by parameters:

Threshold value is set by	Parameter
Threshold value in 0.1°C valid until 1st communication	-300 ... 800; <u>200</u>

If the threshold is set by a communication object:

If the threshold is set by communication objects, a threshold which is valid until the first communication of a new threshold must be determined for the initial operation. The threshold value communicated last can be used if the weather station is already in operation.

From the 1st communication onwards, the threshold value corresponds to the value of the communication object and is not multiplied by the factor 0.1.

Threshold value is set by	Communication object
Threshold value in 0.1°C valid until 1st communication	-300 ... 800; <u>200</u>

If the threshold is set by communication object with saving of the last value:

As soon as a threshold has been set by means of a parameter or by means of a communication object, the threshold set at last remains until a new threshold has been transmitted by a communication object.

The thresholds set at last by communication objects are saved in EEPROM in order to maintain them in case of voltage breakdown and to provide them as soon as there is voltage supply again.

Threshold value is set by	Com. object with saving of the last value
Hysteresis of the threshold value in 0.1°C.	0 ... 100; <u>30</u>
Activation delay	<u>none</u> • 1 s • 1 min... • 2 h
Switch-off delay	<u>none</u> • 1 s • 1 min... • 2 h
Output switches at	<ul style="list-style-type: none"> • TV above = ON TV-Hyst. below = OFF • TV below = ON TV-Hyst. above = OFF
Communication object switching output temperature threshold value 1 / 2 / 3 / 4	<ul style="list-style-type: none"> • do not send • send in case of change • send inverted in case of change • <u>send in case of change and periodically</u> • send inverted in case of change and periodically

5.5. Wind force

Measured value	<ul style="list-style-type: none"> • <u>not send</u> • send cyclically • send in case of change • send in case of change and cyclically
From a wind force change of	1 m/s ... • 4 m/s
Send and reset of the min. and max. wind force value on request	<u>do not release</u> • release
Threshold value 1 / 2 / 3 / 4	<u>not active</u> • active

5.5.1. Wind force threshold value 1 / 2 / 3

Threshold value is set by	<ul style="list-style-type: none"> • <u>Parameter</u> • Communication object • Com. object with saving of the last value
---------------------------	---

If the threshold is set by parameters:

Threshold value in 0.1 m/s	0... 350; <u>40</u>
Hysteresis of the threshold value in 0.1 m/s	0 ... 250; <u>20</u>

If the threshold is set by a communication object:

Start threshold value in 0.1 m/s	0 ... 350; <u>40</u>
Hysteresis of the threshold value in 0.1 m/s	0 ... 250; <u>20</u>

All other parameters correspond to those of the temperature threshold value (see there).

5.6. Lightness

Measured value	<ul style="list-style-type: none"> • <u>not send</u> • send cyclically • send in case of change • send in case of change and cyclically
From change of (only when sending "in case of change")	1 ... 50; <u>10</u>
Threshold value 1 / 2 / 3 / 4	<u>not active</u> • active

5.6.1. Lightness threshold value 1 / 2 / 3

Threshold value is set by	<ul style="list-style-type: none"> • <u>Parameter</u> • Communication object • Com. object with saving of the last value
---------------------------	---

If the threshold is set by parameters:

Threshold value in klx	1 ... 99; <u>5</u>
Hysteresis of the threshold value in klx	0 ... 99; <u>2</u>

If the threshold is set by a communication object:

Start threshold value in klx valid until 1st communication	1 ... 99; <u>5</u>
Hysteresis of the threshold value in klx	0 ... 99; <u>2</u>

All other parameters correspond to those of the temperature threshold value (see there).

5.7. Dawn

Threshold value 1 / 2 / 3	<u>not active</u> • active
---------------------------	----------------------------

5.7.1. Dawn threshold value 1 / 2 / 3

Threshold value is set by	<ul style="list-style-type: none"> • Parameter • Communication object • Com. object with saving of the last value
---------------------------	--

If the threshold is set by parameters:

Threshold value in lx	1 ... 1000; <u>200</u>
Hysteresis of the threshold value in lx	0 ... 1000; <u>50</u>

If the threshold is set by a communication object:

Start threshold value in lx	1 ... 1000; <u>200</u>
Hysteresis of the threshold value in lx	0 ... 1000; <u>50</u>

All other parameters correspond to those of the temperature threshold value (see there).

5.8. Calendar time switch

Period 1 / 2 / 3	<u>not active</u> • active
------------------	----------------------------

5.8.1. Calendar time switch period 1 / 2 / 3

From:	
Month	<u>January</u> ... December
Day	<u>1</u> ... 29 / 1 ... 30 / 1 ... 31 (depending on month)
up to and including:	
Month	<u>January</u> ... December
Day	<u>1</u> ... 29 / 1 ... 30 / 1 ... 31 (depending on month)
Sequence 1	<u>not active</u> • active
Sequence 2	<u>not active</u> • active

5.8.2. Calendar time switch period 1 / 2 / 3, sequence 1 / 2

Setting of switching times by	<u>Parameter</u> • Communication objects
Activation-time hours	<u>0</u> ... 23
Activation-time minutes	<u>0</u> ... 59

Switch-off time hours	<u>0</u> ... 23
Switch-off time minutes	<u>0</u> ... 59
Communication object switching output period 1 / 2 / 3, sequence 1 / 2	<ul style="list-style-type: none"> • <u>not send</u> • send in case of change • send inverted in case of change • send in case of change and cyclically • send inverted in case of change and cyclically

5.9. Week time switch

Monday ... Sunday	<u>not active</u> • active
-------------------	----------------------------

All 4 sequences of the selected day are always activated together.

5.9.1. Week time switch Mon, Tue, Wed, ..., 1...4


Setting of switching times by	<u>Parameter</u> • Communication objects
Activation-time hours	<u>0</u> ... 23
Activation-time minutes	<u>0</u> ... 59
Switch-off time hours	<u>0</u> ... 23
Switch-off time minutes	<u>0</u> ... 59
Communication object switching output Mon...Sun 1 / 2 / 3 / 4	<ul style="list-style-type: none"> • <u>not send</u> • send in case of change • send inverted in case of change • send in case of change and cyclically • send inverted in case of change and cyclically

Hinweis: If for example the set switch-off time is 3.35 pm, the output switches off when the time changes from 3.35 pm to 3.36 pm.

Use of the week time switch:

Communication object „Week time switch OR 1/2/3/4“

The sequence 1 swichting times of all weekdays are combined via the OR logic gate “Sequence 1” and can be used as communication object “Week time switch 1” for own logic links .

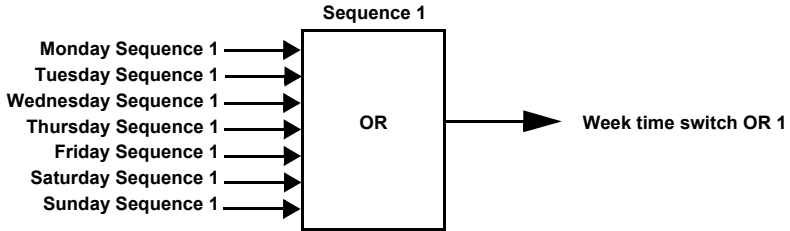

5.10. AND Logic

Logic 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8	<u>not active</u> • active
-------------------------------------	----------------------------

5.10.1. AND Logic 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8

1. / 2. / 3. / 4. Input	<ul style="list-style-type: none"> • do not use • all switching events which the sensor provides (see "Linkage inputs of the AND logic")
Logic output sends	<ul style="list-style-type: none"> • <u>not</u> • one 1 bit object • two 8 bit objects

Logic output sends "one 1 bit Object":

Logic output sends	one 1 bit object
if logic = 1 → object value	<u>1</u> • 0
if logic = 0 → object value	1 • <u>0</u>
Communication object AND Logic 1 sends	<ul style="list-style-type: none"> • <u>in case of the change of logic</u> • in case of the change of logic to 1 • in case of the change of logic to 0 • in case of the change of logic and cyclically • in case of the change of logic to 1 and cyclically • in case of the change of logic to 0 and cyclically
send cyclically every (only if sending "cyclically")	<u>5 sec</u> ... 2 h

Logic output sends "two 8 bit objects":

Logic output sends	two 8 bit objects
if logic = 1 → object A value	0 ... 255; <u>127</u>
if logic = 0 → object A value	<u>0</u> ... 255
if logic = 1 → object B value	0 ... 255; <u>127</u>

if logic = 0 → object B value	0 ... 255
Communication objects AND Logic 1 A and B sends	<ul style="list-style-type: none"> • in case of the change of logic • in case of the change of logic to 1 • in case of the change of logic to 0 • in case of the change of logic and cyclically • in case of the change of logic to 1 and cyclically • in case of the change of logic to 0 and cyclically
send cyclically every (only if sending "cyclically")	5 sec ... 2 h


Object A: Shading position height (0 = safe position, 255 = completely extracted).

Object B: Shading position slat angle (255 = 100% closed, 200 = approx. 80% closed).

Use of the AND logic:

Example automatic shading

The AND logic can be used to set the conditions for shading, for example a lightness threshold value and sun in a certain area. The activation of shading after wind alarm and the blocking by manual operation were implied in this example, too.

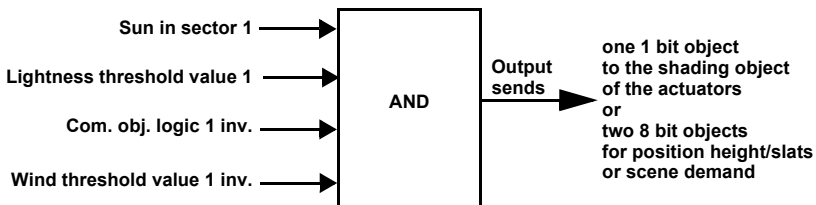

- Sun in sector 1: Describes the position of the sun for which the shading is active.
- Lightness threshold value 1: Defines the lightness from which shading takes place.
- Communication object logic 1 inverted: Blocking function for sun automatic, e. g. by a push button (Blocking after manual operation).
Logic = 0 → released, logic = 1 → blocked.
The "Communication objects logic inputs" must be released in the "General Settings" for this purpose and the "communication object logic 1" must be linked with the button via group addresses.
- Wind threshold value 1 inverted: Activates the automatic function after the end of a wind alarm (shading is extended if all other conditions are complied with).

5.10.2. Linkage inputs of AND logic

do not use

Night = 1
Night = 0
Dawn threshold value 1
Dawn threshold value 1 inverted
Dawn threshold value 2
Dawn threshold value 2 inverted
Dawn threshold value 3
Dawn threshold value 3 inverted
Lightness threshold value 1
Lightness threshold value 1 inverted
Lightness threshold value 2
Lightness threshold value 2 inverted
Lightness threshold value 3
Lightness threshold value 3 inverted
Calendar time switch 1. period Nr. 1
Calendar time switch 1. period Nr. 1 inverted
Calendar time switch 1. period Nr. 2
Calendar time switch 1. period Nr. 2 inverted
Calendar time switch 2. period Nr. 1
Calendar time switch 2. period Nr. 1 inverted
Calendar time switch 2. period Nr. 2
Calendar time switch 2. period Nr. 2 inverted
Calendar time switch 3. period Nr. 1
Calendar time switch 3. period Nr. 1 inverted
Calendar time switch 3. period Nr. 2
Calendar time switch 3. period Nr. 2 inverted
Communication object logic input 1
Communication object logic input 1 inverted
Communication object logic input 2
Communication object logic input 2 inverted
Communication object logic input 3
Communication object logic input 3 inverted
Communication object logic input 4
Communication object logic input 4 inverted
Communication object logic input 5
Communication object logic input 5 inverted
Communication object logic input 6
Communication object logic input 6 inverted
Communication object logic input 7
Communication object logic input 7 inverted
Communication object logic input 8
Communication object logic input 8 inverted
Rain yes
Rain no
Sun in sector 1
Sun not in sector 1
Sun in sector 2
Sun not in sector 2

Sun in sector 3
Sun not in sector 3
Sun in sector 4
Sun not in sector 4
Sun in sector 5
Sun not in sector 5
Failure temperature
Failure temperature inverted
Failure wind
Failure wind inverted
Temperature threshold value 1
Temperature threshold value 1 inverted
Temperature threshold value 2
Temperature threshold value 2 inverted
Temperature threshold value 3
Temperature threshold value 3 inverted
Temperature threshold value 4
Temperature threshold value 4 inverted
Wind threshold value 1
Wind threshold value 1 inverted
Wind threshold value 2
Wind threshold value 2 inverted
Wind threshold value 3
Wind threshold value 3 inverted
Week time switch Monday 1
Week time switch Monday 1 inverted
Week time switch Monday 2
Week time switch Monday 2 inverted
Week time switch Monday 3
Week time switch Monday 3 inverted
Week time switch Monday 4
Week time switch Monday 4 inverted
Week time switch Tuesday 1
Week time switch Tuesday 1 inverted
Week time switch Tuesday 2
Week time switch Tuesday 2 inverted
Week time switch Tuesday 3
Week time switch Tuesday 3 inverted
Week time switch Tuesday 4
Week time switch Tuesday 4 inverted
Week time switch Wednesday 1
Week time switch Wednesday 1 inverted
Week time switch Wednesday 2
Week time switch Wednesday 2 inverted
Week time switch Wednesday 3
Week time switch Wednesday 3 inverted
Week time switch Wednesday 4
Week time switch Wednesday 4 inverted

Week time switch Thursday 1
 Week time switch Thursday 1 inverted
 Week time switch Thursday 2
 Week time switch Thursday 2 inverted
 Week time switch Thursday 3
 Week time switch Thursday 3 inverted
 Week time switch Thursday 4
 Week time switch Thursday 4 inverted
 Week time switch Friday 1
 Week time switch Friday 1 inverted
 Week time switch Friday 2
 Week time switch Friday 2 inverted
 Week time switch Friday 3
 Week time switch Friday 3 inverted
 Week time switch Friday 4
 Week time switch Friday 4 inverted
 Week time switch Saturday 1
 Week time switch Saturday 1 inverted
 Week time switch Saturday 2
 Week time switch Saturday 2 inverted
 Week time switch Saturday 3
 Week time switch Saturday 3 inverted
 Week time switch Saturday 4
 Week time switch Saturday 4 inverted
 Week time switch Sunday 1
 Week time switch Sunday 1 inverted
 Week time switch Sunday 2
 Week time switch Sunday 2 inverted
 Week time switch Sunday 3
 Week time switch Sunday 3 inverted
 Week time switch Sunday 4
 Week time switch Sunday 4 inverted
 Week time switch OR 1
 Week time switch OR 1 inverted
 Week time switch OR 2
 Week time switch OR 2 inverted
 Week time switch OR 3
 Week time switch OR 3 inverted
 Week time switch OR 4
 Week time switch OR 4 inverted

5.11. OR Logic

Logic 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8

not active • active

5.11.1.)OR Logic 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8

1. / 2. / 3. / 4. Input	<ul style="list-style-type: none"> • <u>do not use</u> • all switching events which the sensor provides (see "Linkage inputs of the OR logic")
Logic output sends	<ul style="list-style-type: none"> • <u>one 1 bit object</u> • two 8 bit objects

All settings of the OR logic correspond to those of the AND logic.

5.11.2. Linkage inputs of OR logic

The linkage inputs of the OR logic correspond with the parameters of the AND logic. The OR logic is *additionally* provided with the following inputs:

AND logic output 1
 AND logic output 1 inverted
 AND logic output 2
 AND logic output 2 inverted
 AND logic output 3
 AND logic output 3 inverted
 AND logic output 4
 AND logic output 4 inverted
 AND logic output 5
 AND logic output 5 inverted
 AND logic output 6
 AND logic output 6 inverted
 AND logic output 7
 AND logic output 7 inverted
 AND logic output 8
 AND logic output 8 inverted

Questions about the product?

You can reach the technical service of Elsner Elektronik under
Tel. +49 (0) 70 33 / 30 945-250 or
service@elsner-elektronik.de

We need the following information to process your service request:

- Type of appliance (model name or item number)
- Description of the problem
- Serial number or software version
- Source of supply (dealer/installer who bought the device from Elsner Elektronik)

For questions about KNX functions:

- Version of the device application
- ETS version used for the project